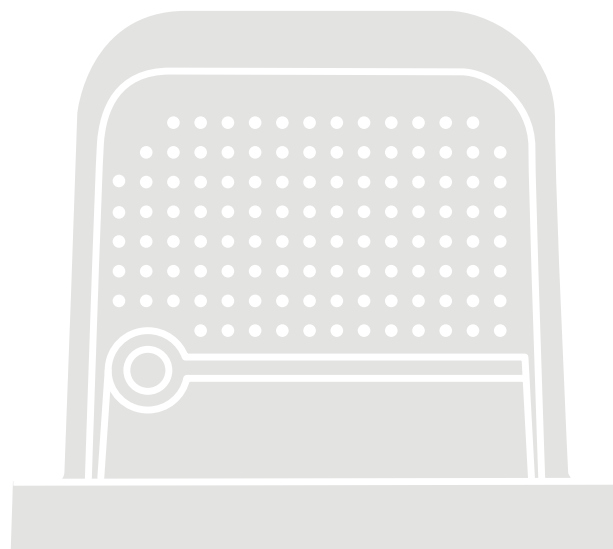


CBIPLATE


CBIPLERB6
CBIPLERB5HS



Retrofit platen


NL - Aanwijzingen en aanbevelingen voor installatie en gebruik

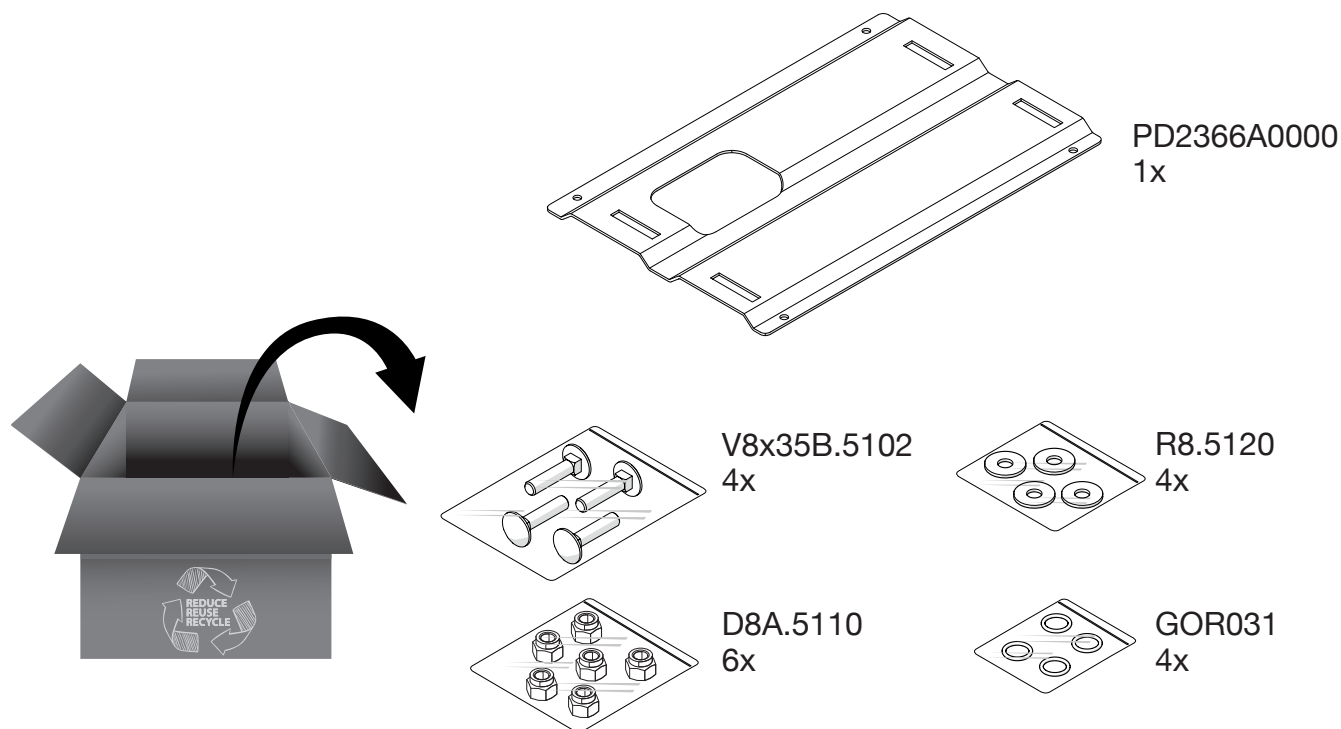1





2






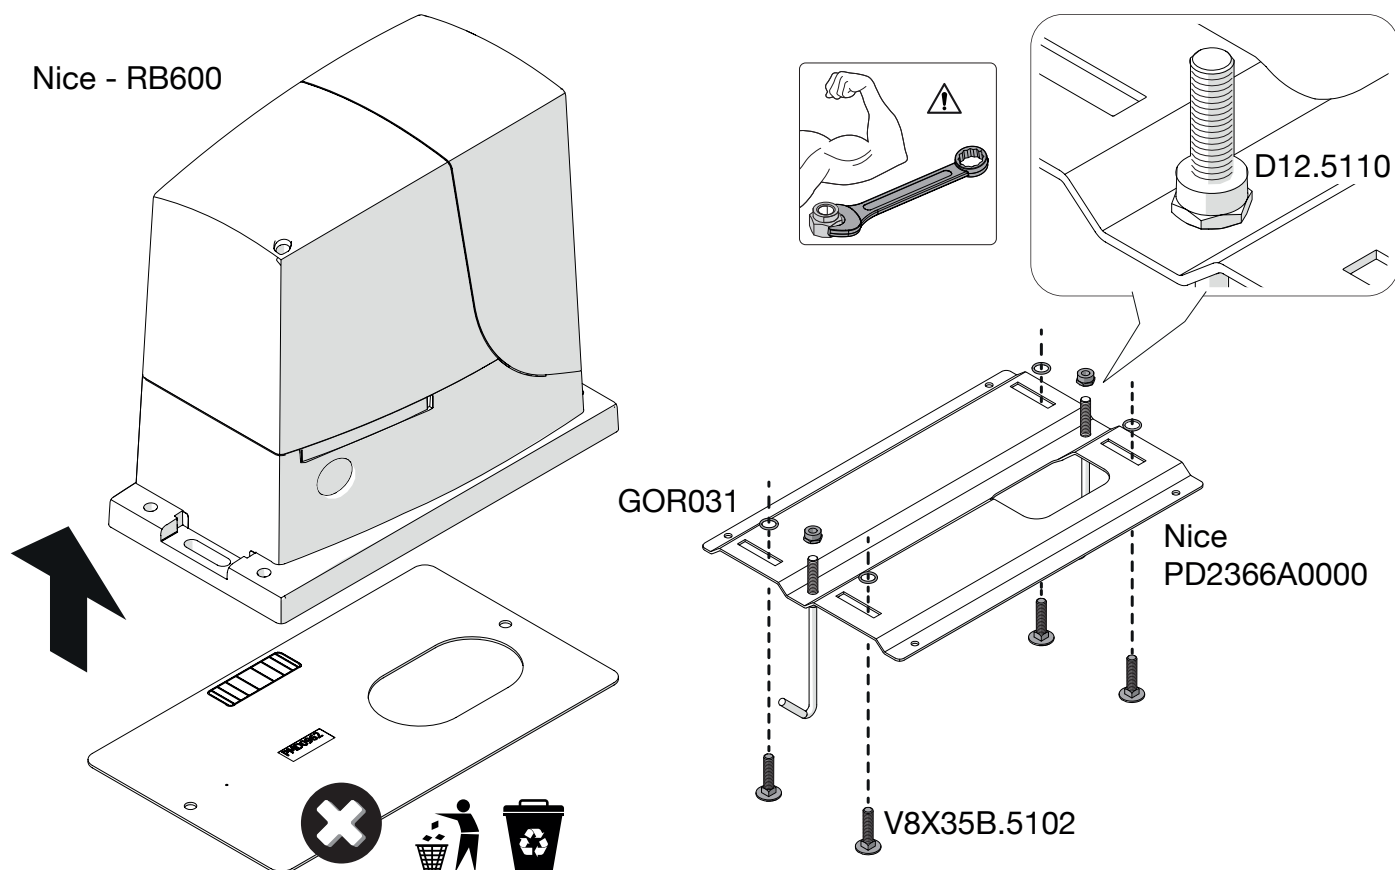
Nice - RB600



3


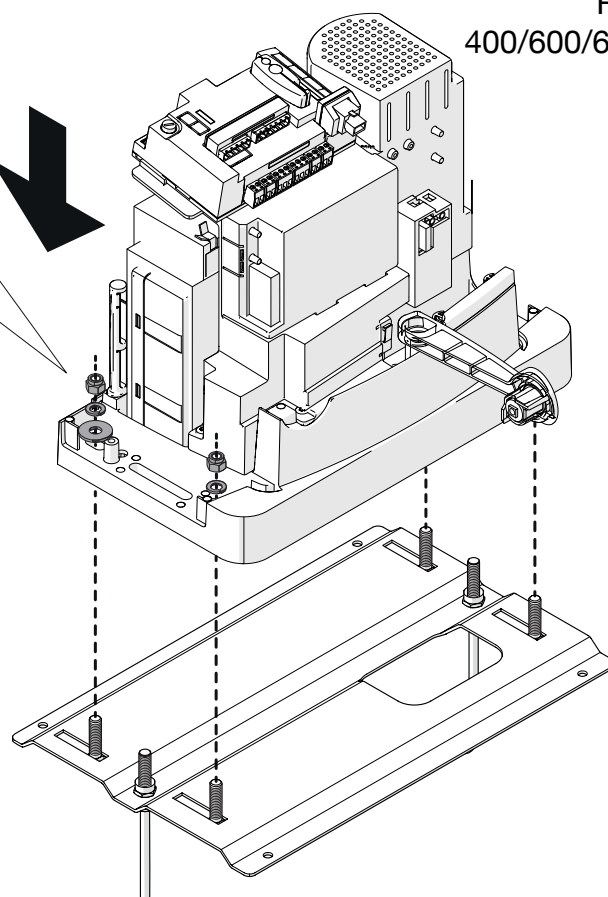
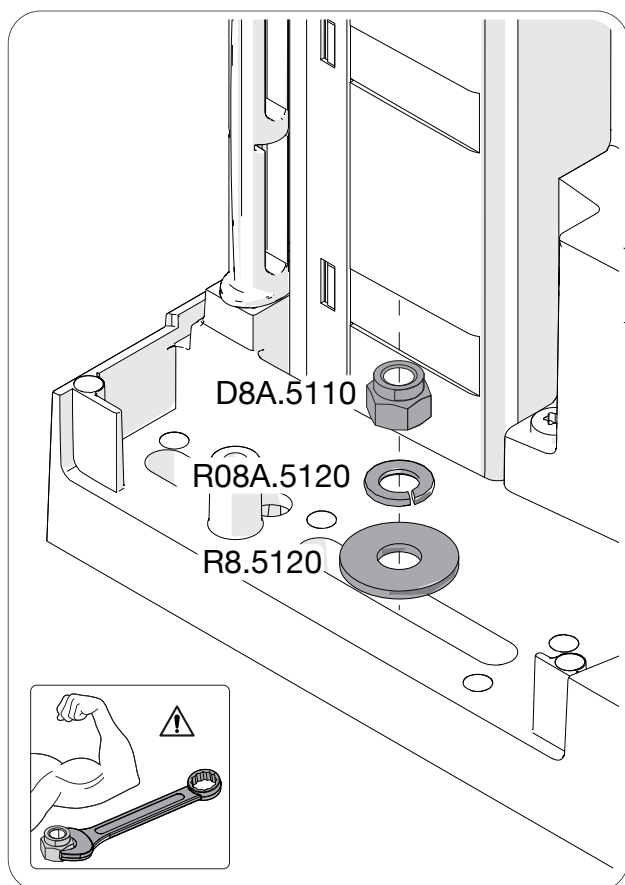
Robus
400/600/600HS

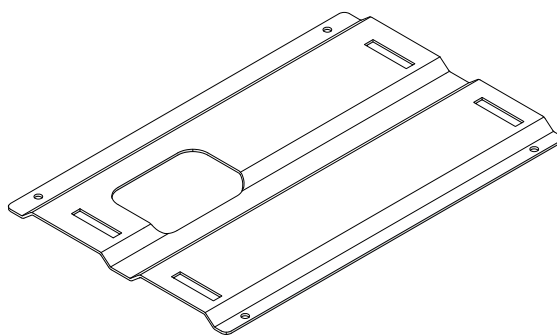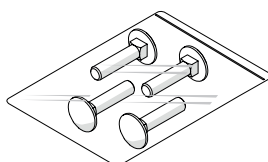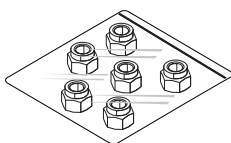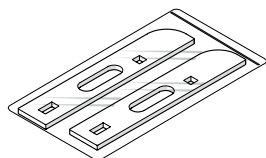1

PD2366A0000
1xV8x35B.5102
4xR8.5120
4xD8A.5110
6xGOR031
4xPD2362A0000
2x

2

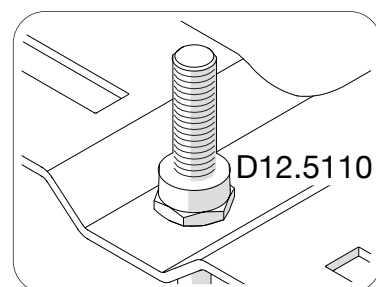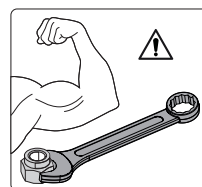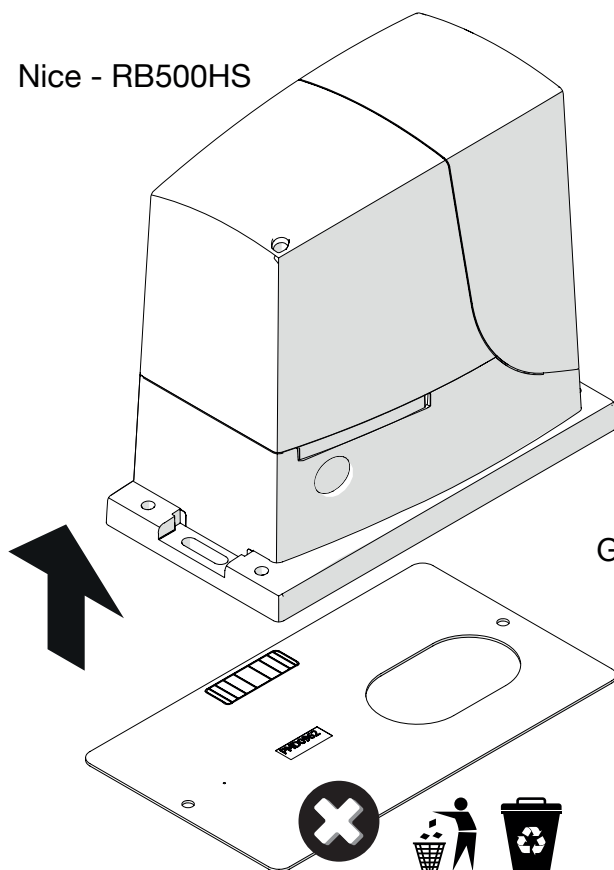Nice - RB500HS



D12.5110

PD2362A0000

GOR031

Nice
PD2366A0000

V8X35B.5102

3

Robus
400/600/600HS